



# Convection Heater with Turbo Fan and Timer

MODEL NO: EV2217CH

INSTRUCTION MANUAL  
IMPORTANT INSTRUCTIONS RETAIN FOR FUTURE  
USE

READ FULLY BEFORE USE

## SAFETY INSTRUCTIONS



**Carefully read this manual in full before using this heater.**

Ensure that you know how the heater functions and how to operate it.

Maintain the heater in accordance with the instructions to ensure that it functions properly.

Keep this manual with the heater. If the heater is to be used by a third party, this instruction manual must be supplied with it.

The safety instructions do not by themselves eliminate any danger completely and proper accident prevention measures must always be used.

No liability can be accepted for any damage caused by non-compliance with these instructions or any other improper use or mishandling.

**WARNING! Do not use this heater if it has been damaged in any way or if the supply cord is damaged. Return it immediately to the retailer. Heaters should be checked annually for electrical safety in order to limit the risk of electric shock or fire.**

## PACKAGE CONTENTS

1 x Heater

2 x Feet

1 Pkt Fixing Screws

1 x Instruction Manual

**CAUTION. Confirm all parts before disposing of packaging. Safely dispose of all plastic bags and other packaging components. They may be potentially dangerous to children.**

## LOCATION AND SAFE USE OF YOUR ELECTRIC HEATER

### **Environment**

Use the heater only as directed. This heater is designed for domestic use only.

Do not immerse any part of this appliance or supply cord in water. Do not use with wet hands or use in any damp situations.

This appliance is designed for inside use only. Do not use outdoors.

Do not use near curtains or other combustible materials.

Do not use near a hot gas or electrical burner.

This heater must not be located directly below a socket outlet.

This appliance must not be used in locations where flammable vapour or explosive dust is likely to exist.

This heater must not be used in the immediate surroundings of any bath, shower or swimming pool or used in any other damp area where contact with water may create an electrical hazard.

### **Timers.**

Do not use this heater with a thermal control, a programmed control, a timer or any other device that switches the heater automatically other than those on the appliance, since a fire risk exists if the heater is covered or displaced.

### **Controls.**

The heater has the following control functions.

**Twin Heat Selector Switch**

**Thermostat**

**Fan On/Off Switch**

**24Hour Timer**

## LOCATION AND SAFE USE OF YOUR ELECTRIC FAN HEATER (continued)

### **Assembly**

Attach the two feet to the base of the heater using the screws supplied. The feet should be attached to the outer edge of the base using the screw holes fitted.

### **Manual Operation.**

#### **Note.**

**The timer is fitted with an "AUTO – MANUAL" override switch. This switch must be in MANUAL mode for the heater to operate manually.**

Once the electric heater has been installed correctly in position, connect the supply plug to a suitable power outlet and switch on. Ensure the thermostat and any control switch is set to 'Off' before plugging in.

Select the desired heat setting on the controller by adjusting the thermostat from minimum to maximum as desired.

Select the heating range by selecting either Low (750 watts) or High (2000 watts) using the heat selecting switches.

The heater will operate and the indicator lamps will light.

### **Fan Booster**

To operate with fan assist booster simply operate as above and select fan "ON" option by using the fan selector switch.

The heater may be used as a cool air fan only by selecting "fan only" option with the thermostat set to Maximum.

### **Timer Operation**

The timer is a 24hour programmable time clock.

Each red button on the timer represents 15 minutes of time. When the button is pressed "inwards" the heater will be "OFF" at this point and when the button is pressed "outwards" the heater will be "ON" at this point when the timer rotates past this point



Set the current time on the timer by rotating clockwise. Align the current time with the black arrow marked on the timer face.

Set the Auto- Manual override switch to TIMER mode.

Set the time that you want the heater to operate using the red buttons on the timer control, in for off and out for on.

Switch the heat selector switch to the desired setting.

Switch the thermostat to the desired setting. Set fan mode if desired.

The timer will rotate and at the selected time the heater will operate.

**Warning! Ensure the heater is not covered and is clear from any combustible material when used with timer mode.**

**Caution: First Time Use!**

For first time use there may be a small amount of smoke or smell, this is normal. Heating elements may be coated in a protective coating during transportation.

**Warning! Remember to switch the heater to "OFF" at the end of use and disconnect from the mains supply, do not leave on unattended. There may be a risk of fire.**

**Warning! Do not cover this heater. Do not use other than as directed. Do not knock over or block any air vents.**

## IMPORTANT SAFETY INFORMATION



When using electric appliances always observe safety regulations where applicable to reduce the risk of fire, electric shock and personal injury.  
Always check that the power supply corresponds to the voltage on the rating plate.

**Warning!** This electric heater must be connected to a suitable 220-240 V ~ 50Hz power supply. If using an extension cord, ensure that the extension cord is of a suitable 10-amp power rating. Fully unwind the supply cord when in use as a coiled cord may overheat. **Warning! Always unplug from the mains supply when not in use.**

**Warning!** If the supply cord is damaged it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

**Warning!** Always unplug from mains supply when not in use. Do not abuse or damage the power cord. Fully unwind the cord before use as a coiled cord may overheat.

**Warning!** Caution. Be aware of the danger to young children of any electrical appliance. Keep out of reach of young children.

This appliance is not intended for use by young children or infirm persons. Young children must be supervised to ensure that they do not play with the appliance.

**Warning!** Do not immerse appliance in water or other liquid. Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool. Do not immerse any part of this appliance or supply cord in water. Do not use with wet hands or use in any damp situations.

**Warning!** This appliance is designed for inside use only.

**Warning!** Do not use near curtains or other combustible materials. Do not use outdoors. Do not use near a hot gas or electrical burner.

**Warning!** This heater must not be located directly below a socket outlet.

**Warning!** This appliance must not be used in locations where flammable vapour or explosive dust is likely to exist.

**Warning!** Do not use this heater with a thermal control, a programmed control, a timer or any other device that switches the heater automatically, since a fire risk exists if the heater is covered or displaced.

**Warning!** Do not cover this heater. Always leave a gap around the heater. Damaged or dropped.

**Warning!** Always inspect your heater before use. Do not use this appliance if it has been damaged, dropped, left outdoors or dropped in water.

**Warning!** Do not attempt to service this heater yourself. Return it to a qualified service agent for repair. This appliance requires no maintenance.

#### **Store in a safe place**

**When not in use store your appliance and all its accessories and instruction manual in a safe and dry place.**

## CLEANING AND MAINTENANCE

#### **Before cleaning.**

When not in use or before cleaning, always disconnect the heater from the mains supply.

#### **Cleaning.**

Wipe the outer surface with a damp cloth, dry with a dry towel.

Ensure that the air vents are free of obstruction.

#### **Damage check.**

Always check that the heater is in good working order before use.

#### **Service**

Do not attempt to service this heater. There are no user serviceable parts. If it is faulty in any way, return it to the retailer immediately.

#### **Safety Check**

This heater should be checked annually by a suitably qualified person to ensure its safety and suitability for use.

### **Guarantee Card**

This product is guaranteed against faulty materials and workmanship for a period of 24 months from the date of purchase. The obligation to the purchaser under this warranty is limited to servicing the unit and replacing defective parts when the product is returned freight prepaid to the retailer. This warranty becomes void if the product has been tampered with, damaged by accident, damaged in any other way by improper use or has been purchased second hand. All production orders have quality inspections. In the unlikely event of a deficiency, please contact the retailer from whom this product was purchased.

WARRANTY FOR APPLIANCES USED COMMERCIALY LIMITED TO 90 DAYS

#### **Type of Appliance:**

Model No.:

Purchase date:

Product Purchased From:

Your Name:

Address:

Phone Number:

#### **IMPORTANT!**

Please retain this warranty card along with your purchase receipt. Please do not post to the retailer or importer. If service is required, both of these documents are to be returned with the appliance to your retailer, otherwise a fee may be charged.